

The DesignaKnit PPD Adapter



DESCRIPTION

The adapter consists of a short length of cable having a small 8-pin male connector at one end and an 8-hole female connector at the other end.

PURPOSE

This adapter has these purposes:

1. To convert a serial BrotherLink 1 to a serial BrotherLink 3 or vice versa.
2. To convert a USB BrotherLink 1 to a USB BrotherLink 3 or vice versa.
3. To convert a USB BrotherLink 5 to a USB BrotherLink 3 Plus or vice versa.

A Brotherlink 3 (or a BrotherLink 1 or 5 + PPD Adapter) enables uploading and downloading to the PPD in modes for KH930, KH940, KH950i, KH270, and KH965.

A Brotherlink 1 or 5 (or a BrotherLink 3 + PPD Adapter) enables uploading and downloading direct to the KH930, KH940, KH950i, KH965i and to the PPD in the PPD modes for the KH900 and CK35.

A Brotherlink 5 or a USB Brotherlink 3 Plus also enables interactive knitting. For Interactive Knitting with a USB Brotherlink 3, it is necessary to disconnect any PPD Adapter that was used for uploading or downloading.

HOW TO CONNECT THE ADAPTER

Simply insert the end of the adapter with pins (the male end) into the 8-way connector on the BrotherLink cable. Ensure that the red spot on the male end is on the same side as the locating notch on the BrotherLink cable. Attach the other (female) end of the PPD Adapter to the 8-way male connector on the PPD or knitting machine. Attach the other end of the BrotherLink cable to the computer.